

TRANSITIONS (BEVEL STRIPS & RAMPS / DUAL & RAMPED EDGE JOINT COVERS / TOPCLIP FLOOR TRIMS / COVER JOINTS)

Product Description

PVC Transition profiles are used widely in schools, hospitals, commercial and public buildings. They are designed to protect the edge of floor coverings from damage, reduce trip hazards and provide a smooth transition at joints between different floor coverings. For technical information please email technical@quantum-ps.co.uk.

Dimensions

Profile lengths vary depending on profile, for profiles lengths please visit www.quantumflooring.co.uk.

Colour Ranges:

Inc. Light Reflectance Value (LRV)

TOPCLIP – TOPS &
DEMENTIA FRIENDLY
TRANSITIONS – INSERT

- 6 Claret
- 6 Black
- 10 Rustic
- 10 Peat
- 11 Dark Blue
- 11 Regency
- 11 Spruce
- 11 Granite
- 13 Poppy
- 15 Flint
- 16 Royal Blue
- 21 Fawn
- 26 Light Grey
- 30 Jade
- 33 Tangerine
- 49 Polar Grey
- 51 Ivory
- 52 Sky
- 53 Lime
- 56 Sun
- 64 Mist **NEW**
- 67 Yellow
- 69 Photo*
- 77 Desert **NEW**
- 81 White

SHOWER THRESHOLD
& COVER JOINTS

- 6 Black
- 81 White

RAMP TRIMS, BEVEL
STRIPS & FLOOR TRIMS

- 6 Black
- 7 Dark Brown
- 15 Charcoal
- 29 Cloud Grey
- 81 White

LVT TRANSITIONS
FINISHES


- Gold Anodised
- Silver Anodised
- Satin Etched

DEMENTIA FRIENDLY
TRANSITIONS – BASES


- 6 Claret
- 6 Black
- 10 Rustic
- 10 Peat
- 11 Dark Blue
- 11 Regency
- 11 Spruce
- 11 Granite
- 15 Flint
- 26 Light Grey
- 49 Polar Grey
- 51 Ivory
- 67 Yellow
- 81 White

Range


TopClip Floor Trims NEW & IMPROVED TOPS DESIGN

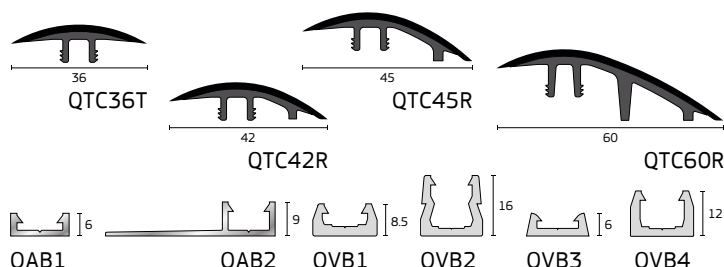


Bevel Strips




Ramps

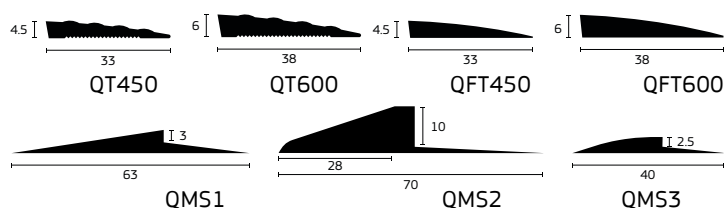


Dual Edge Joint Covers




Ramped Edge Joint Covers

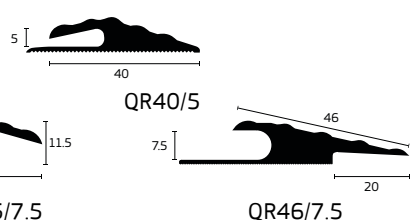


LVT Transitions



Dementia Friendly Transitions

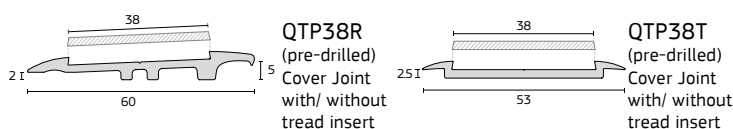

Cover Joints & Shower Threshold

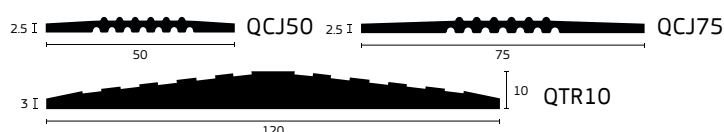

NB: Can't find the colour you are looking for? We offer a colour matching service (subject to volumes) call our customer care team on +44 (0) 161 627 4222 to find out more.



Technical Data

Product Composition

Flexible Products:

Polyvinylchloride (PVC)

Rigid Products:

Unplasticised Polyvinylchloride (UPVC)

(Plasticisers)

Inert fillers

Flame retardants

QAB1 & QAB2:

Aluminium Alloy

Physical and Chemical Properties

Form: solid / rigid

Colour: various

Odour: slight odour

Solubility: insoluble in water

Decomposition: will decompose at temperatures above 150°C

Safety Data

Please review 'Safety Data Sheet – PVC' or 'Safety Data Sheet – CC'.

Maintenance

Note: Do not use solvents

1. Clean with a mild detergent solution.
2. Dry off if necessary with lint free cloth.
3. Only reopen to traffic once dry.

Installation

Most PVC products should be applied with a contact adhesive from a leading supplier. Please ensure the surfaces are clean, dry, smooth and free from grease or dust. It is always advisable that the walls/floors are primed first. Follow the instructions for the application of the adhesive very carefully. Allow the PVC product to acclimatise to room temperature prior to installation.

TopClip Floor Trims

Screw the pre-drilled bases to the floor between the two floor coverings. Position the tops in the base and tap into place using a rubber mallet.

Bevel Strips & Ramps

Apply the adhesive to the floor, the edge of the floor covering and the bottom of the bevel edge.

Dual Edge Joint Covers

Apply adhesive to the floor and base of the profile. Fit the 'thinner' floor covering under flap with foot/flange and the 'thicker' floor covering on the other side.

Ramped Edge Joint Covers

Apply adhesive to the floor and base of the profile. Fit the floorcovering under flap with foot/ flange, with ramp down to the other side.

LVT Transitions

After floorcovering and LVT, fit the Trim over the top. Screw down through pre-drilled holes. Cut the spare LVT to 30mm wide and fit into the trim. It can fit tight into the channel or use Quantum 25 mm contact tape.

Dementia Friendly Transitions

After laying floorcoverings, fit the Trim over the top. Screw down through pre-drilled holes. Peel off release paper and apply tread material into channel. Start at one end and carefully roll into channel. Apply pressure using a hand roller to ensure adequate bond.

Cover Joints

Leave either a 50 mm or 75 mm gap between sheets of vinyl. Place Cover Joint in gap and weld in to place.

Warranty

Quantum Flooring Solutions warrants that all Quantum Flooring products produced and despatched from its works in Oldham, Lancashire are free from material defects and are fit for purpose when fitted strictly in accordance with the manufacturer's instructions.

This warranty is applicable to Quantum Flooring products that have been correctly specified, installed and maintained. Company leaflets, brochures and data sheets (hard copy and online) are available, and these give details of all necessary and relevant requirements.