


## TRANSITION PROFILE INSTALLATION – TOPCLIP




1

Make sure that all surfaces to which Topclip is to be fixed are sound, dry, flat and free from any contaminants.

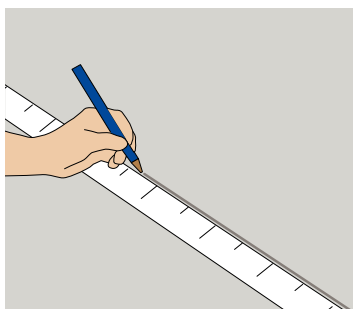


2

Mark out on the floor where you want the transition to go.  
(uPVC bases can be curved on-site up to a radius of approx. 750mm.)

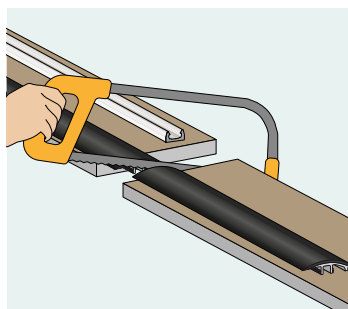


3

Cut the profile top and base to the size required.

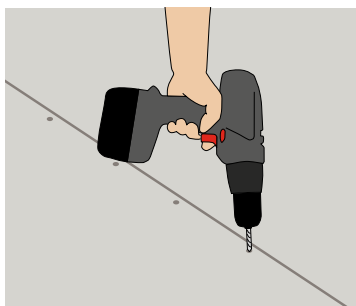


4

Drill the marked substrate using a 6mm drill bit and once drilled insert the appropriately sized plug. (6mm = red plug).

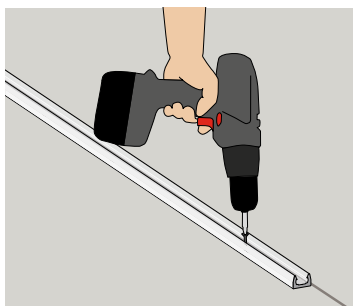


5

Secure base in place using a No. 6 fixing screw. Follow curve if required applying screw at each hole point following the marking out.

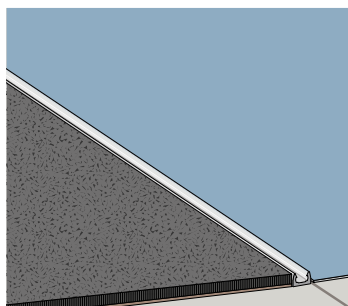

6

Fit both floorcoverings either side of the base, making sure the floorcoverings are butted up to the base.

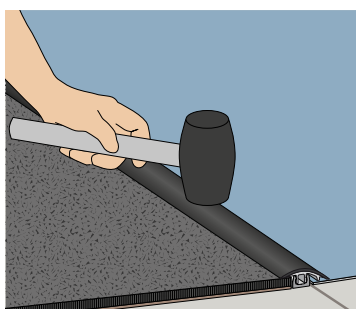

7

Finish by clipping top into base, use a rubber mallet if required, use gentle heat if a curve is required. (Only ever apply heat to the top and never to the base.)

### NEED MORE?

If any further information is required, please do not hesitate to contact Quantum Flooring.

Call:

**+44 (0) 161 627 4222**

Alternatively, email:

**[info@quantumflooring.co.uk](mailto:info@quantumflooring.co.uk)**