

Assembly Instructions




Email : Sales@nobutts.co.uk
Web : www.nobutts.co.uk
Tel : 0800 1777 052

Shelter type: Kimmeridge 4m

KCS02ZC-02-031018-NBB

Exploded View

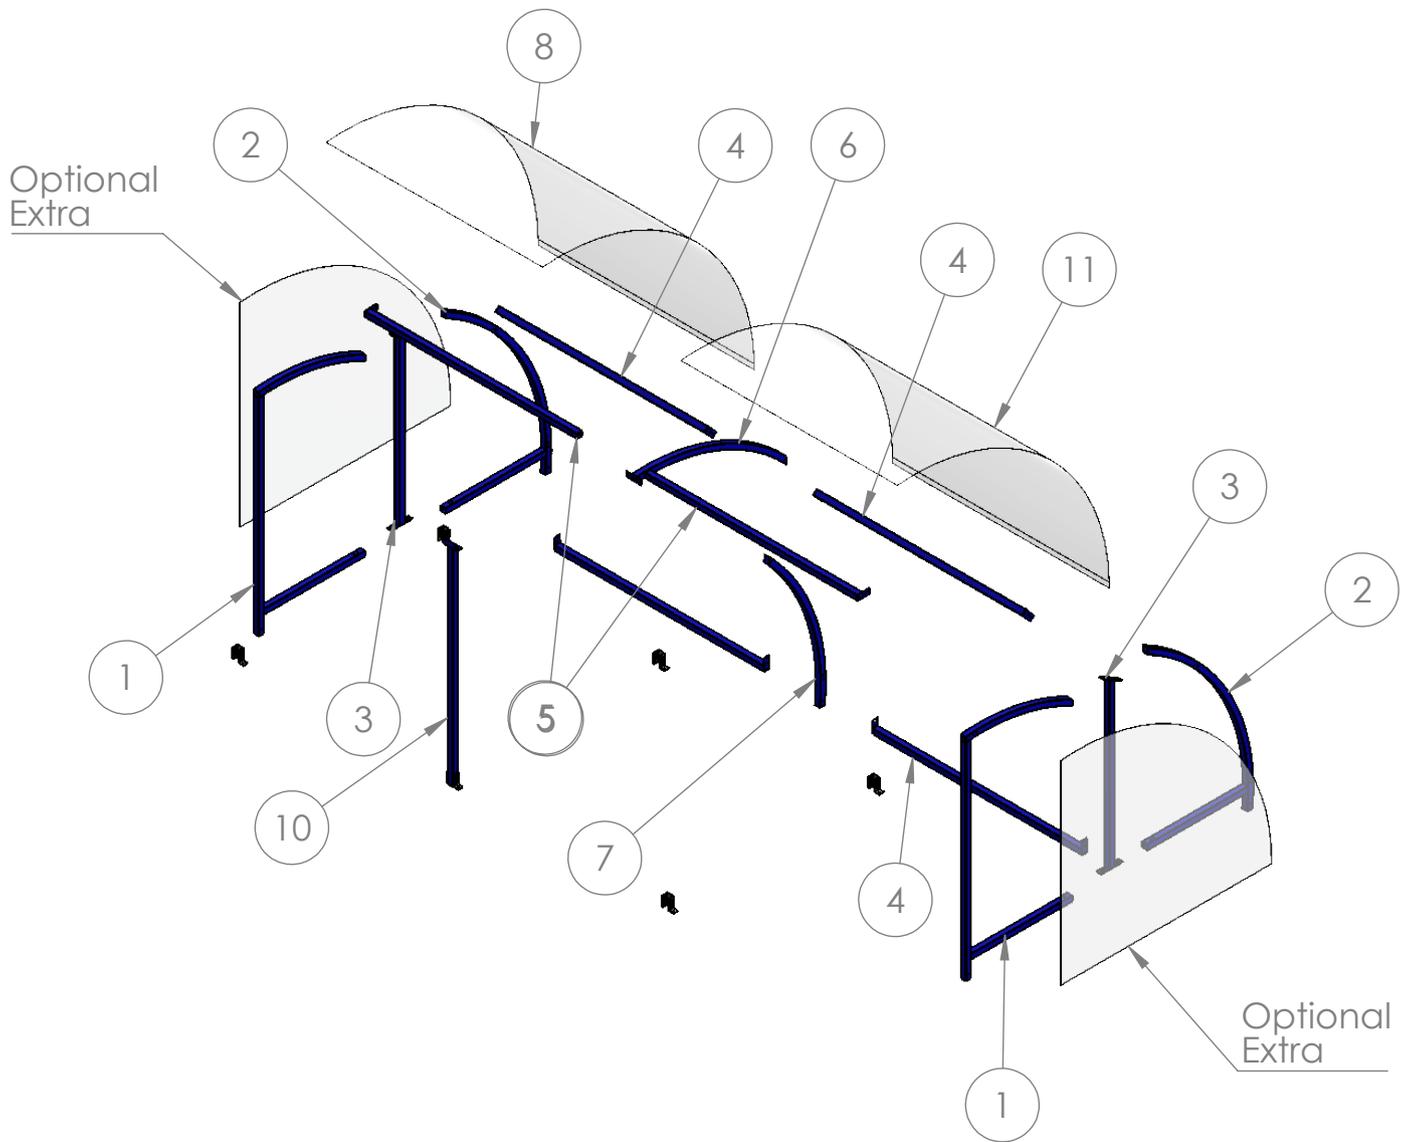

Tools required: (Not supplied)






Drill/Screwdriver



Socket set

PARTS LIST & FITTINGS


ITEM NO.	PART NO.	PART NAME	DIMENSION (mm)	IMAGE	QTY.
1	KFF	Kimmeridge Front Frame Assembly	1975x990		2
2	KRF	Kimmeridge Rear Frame Assembly	2115x985		2
3	KST	Kimmeridge Straight Tie Bar Assembly	1535		2
4	CTB	Central Tie Bar	1950		4
5	TB1	Tie Bar 1	1975		2
6	TCC	Top Central Curve	1330		1
7	LCC	Lower Center Curve	1580		1
8	RP1	Outside Roof Panel	2995x2015		2
9	SP	Side Panel (Optional Extra)	1815x1965		2
10	CP	Center Post Assembly	1935		1
11	KIF	Kimmeridge Internal Foot	153		6
12	EC50	Plastic End Cap	50x50		2

Fittings	M10 x 20 Hex head bolt	M10 x 70 x 80 Hex head bolt	M10 x 100 Anchor bolt	M10 Nuts	M10 Standard Washers	M12 Standard Washers	25mm Tech screws	Plastic caps M10
QTY.	28	8 / 4	6	12	52	6	120	52
Image								

If you have received the "Split End" version (If not go straight to Step 1)


Join the three frame sections to make the Complete Side Frame using M10 bolts.

2 people recommended to fit this shelter.

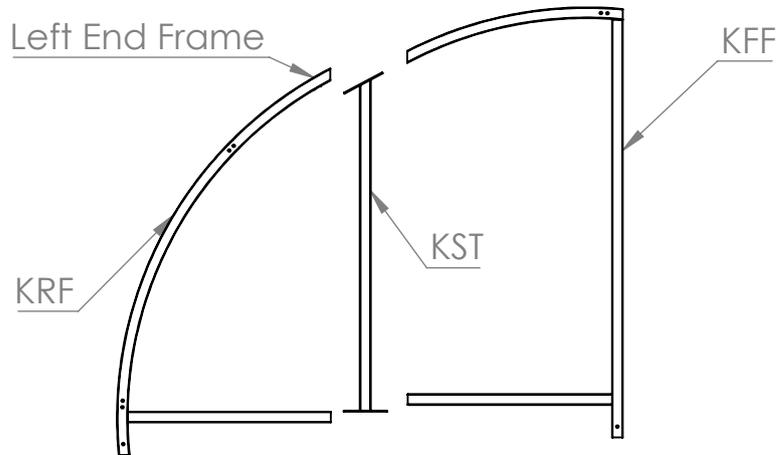


Note: Shelter ends have 2 sides Left and Right. Make sure all holes are in correct position before assembling.


Step 1 Take the **CF Side Frame** and attach the **CTB Tie Bar** to it in the positions shown below. Now secure the **TB1 Tie Bar 1** to the Side of the shelter using **M10 Bolts** supplied.

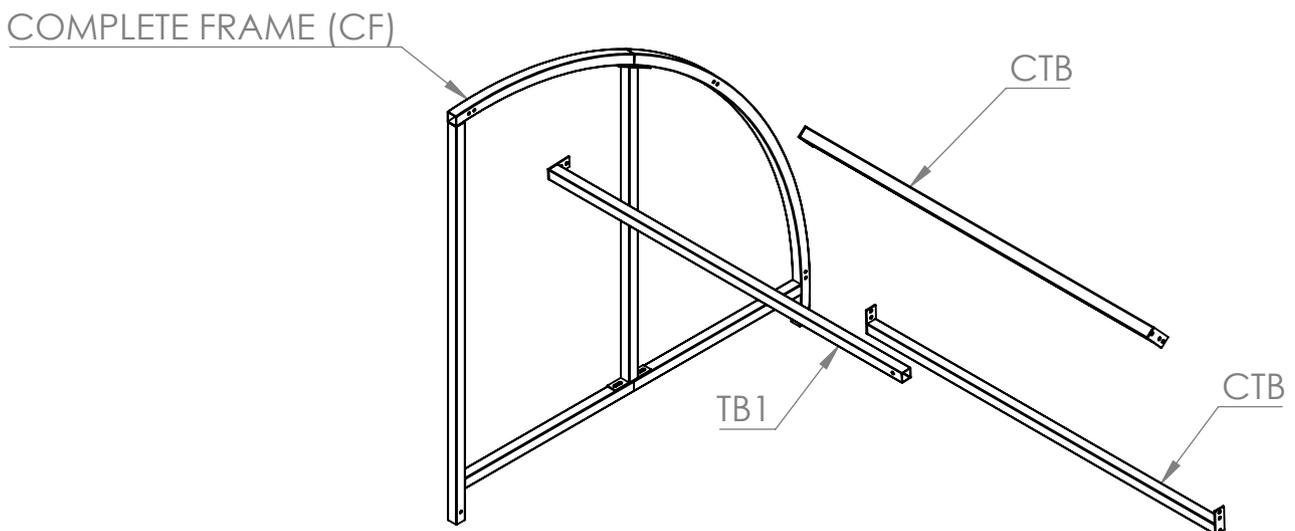


Step 2 Loosely fasten **TCC Top Centre Curve** to **CTB Central Tie Bar**, after doing this place **CP Central Post** under **TB1 Tie Bar 1** and bolt through all 3 parts.

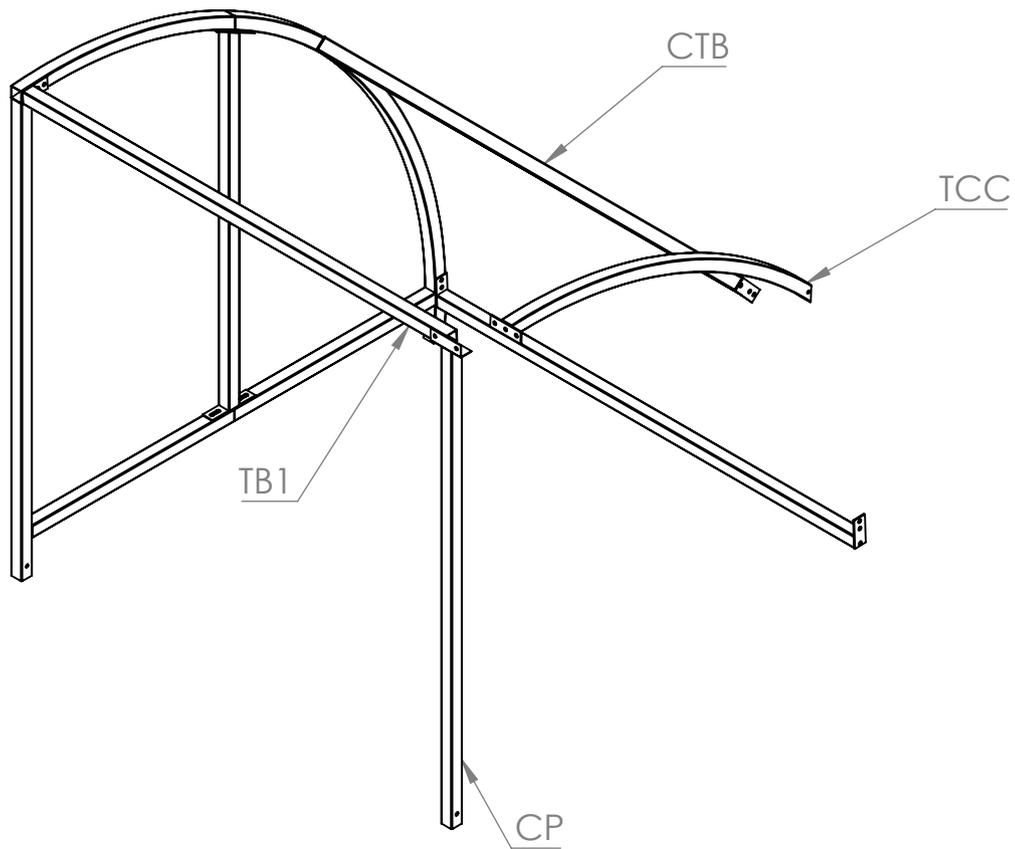


Step 3 Put the **LCC Lower Centre Curve** in place do not tighten the bolts to far as the second side will be attached here.

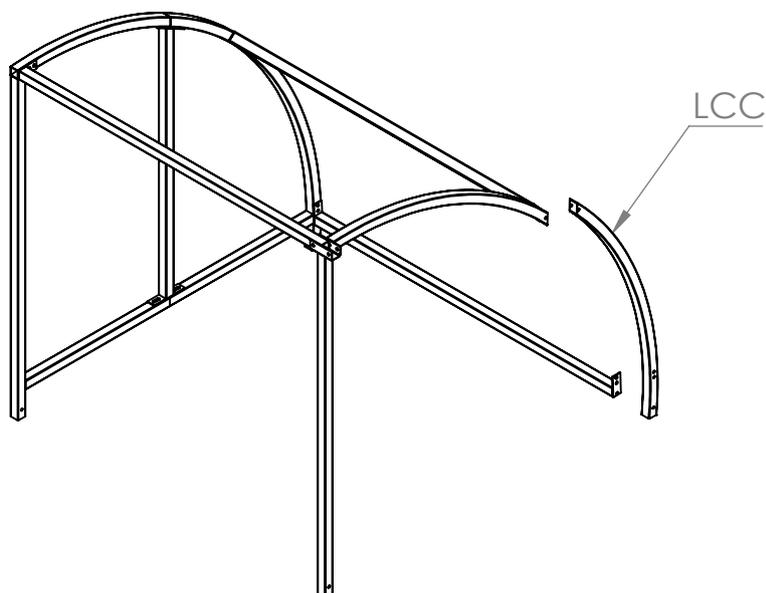

Step 4 Repeat **Step 1, 2 and 3** with the opposite side of the shelter this time securing all centre bolts tightly making one complete unit.

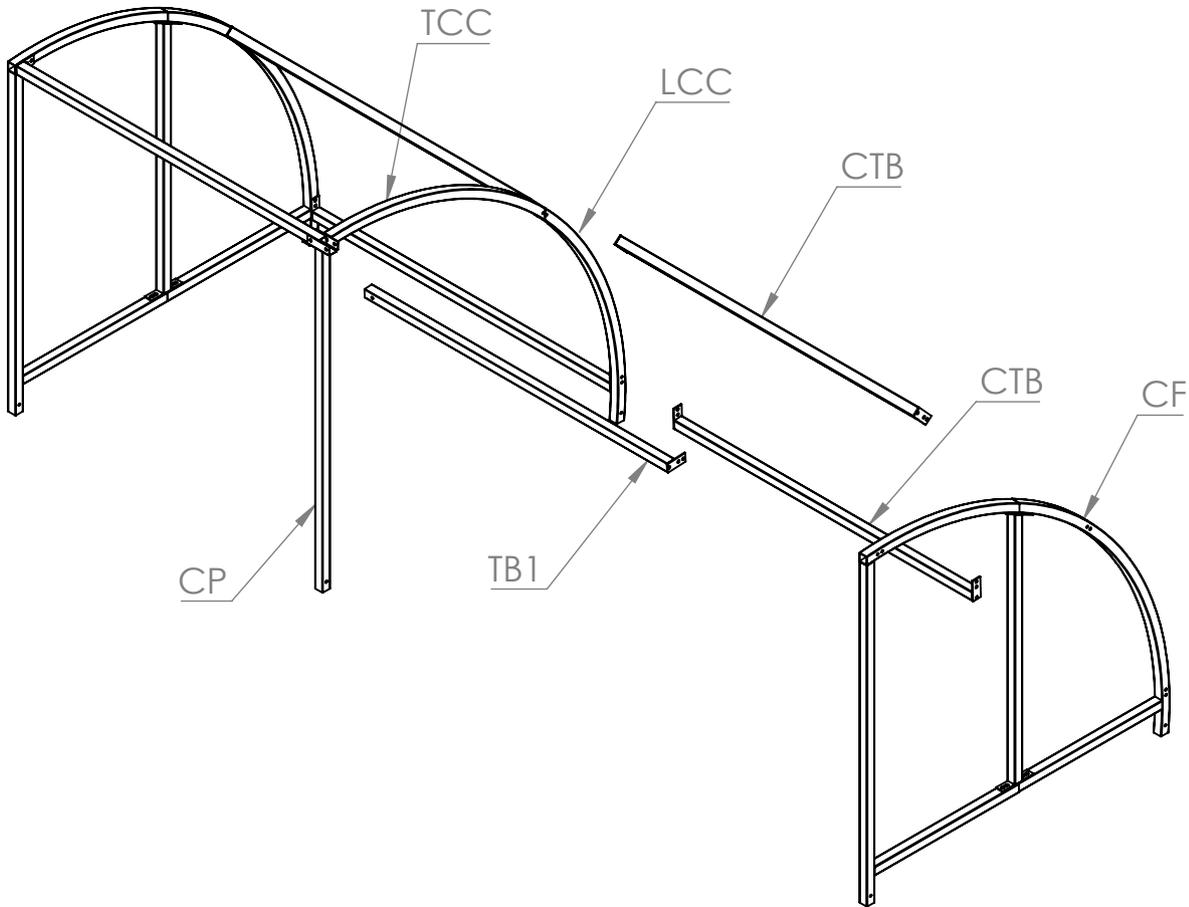


Step 5 Offer each panel to the shelter as shown below and secure in place using Tec-Screws. (1 Screw every 8 inches)

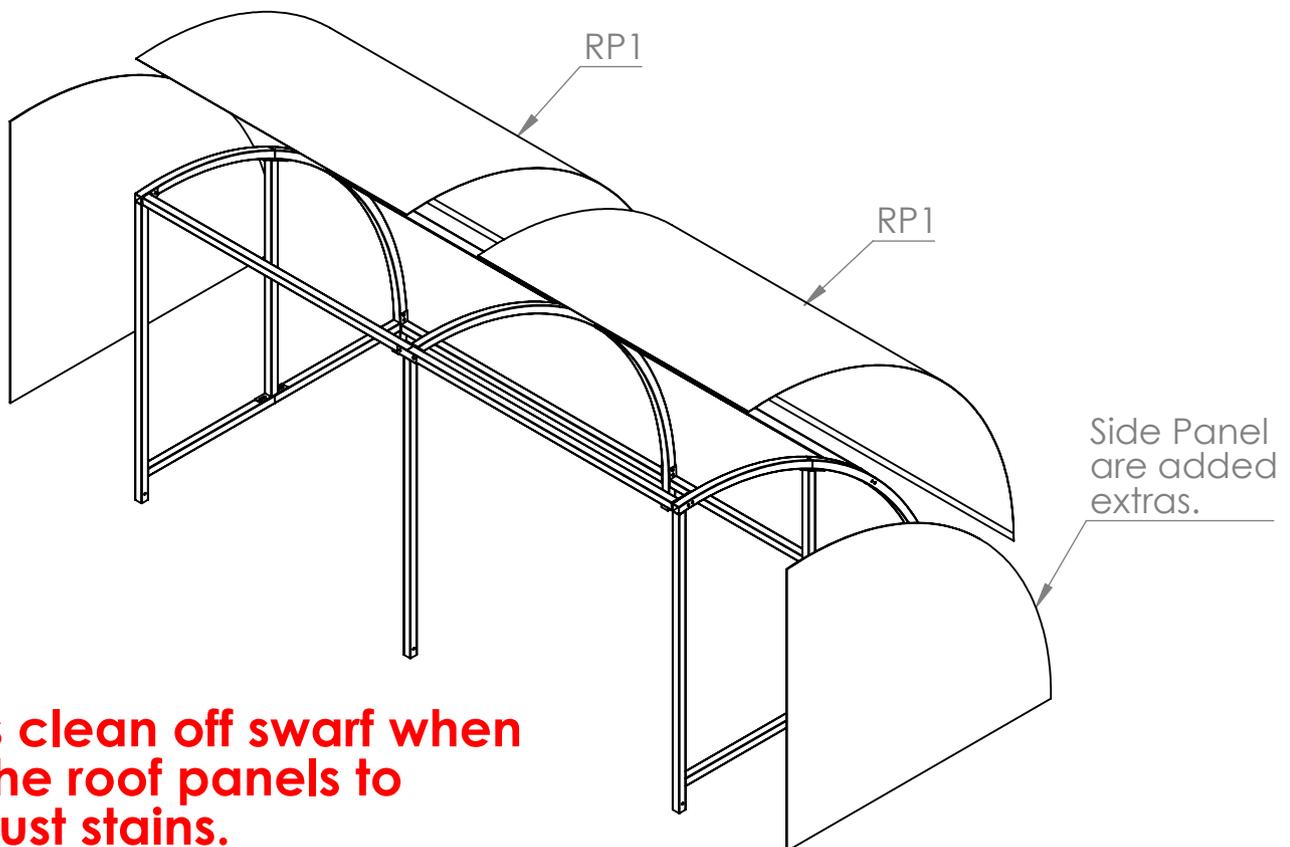

Always clean off swarf when fitting the roof panels to avoid rust stains.

Step 6

Finally move shelter to desired position and insert **KIF Kimmeridge Internal Foot** into each leg. (**Note: the extra holes within the foot is to allow adjustment on an uneven surface**) Secure in Place using the **Anchor Bolts** supplied.

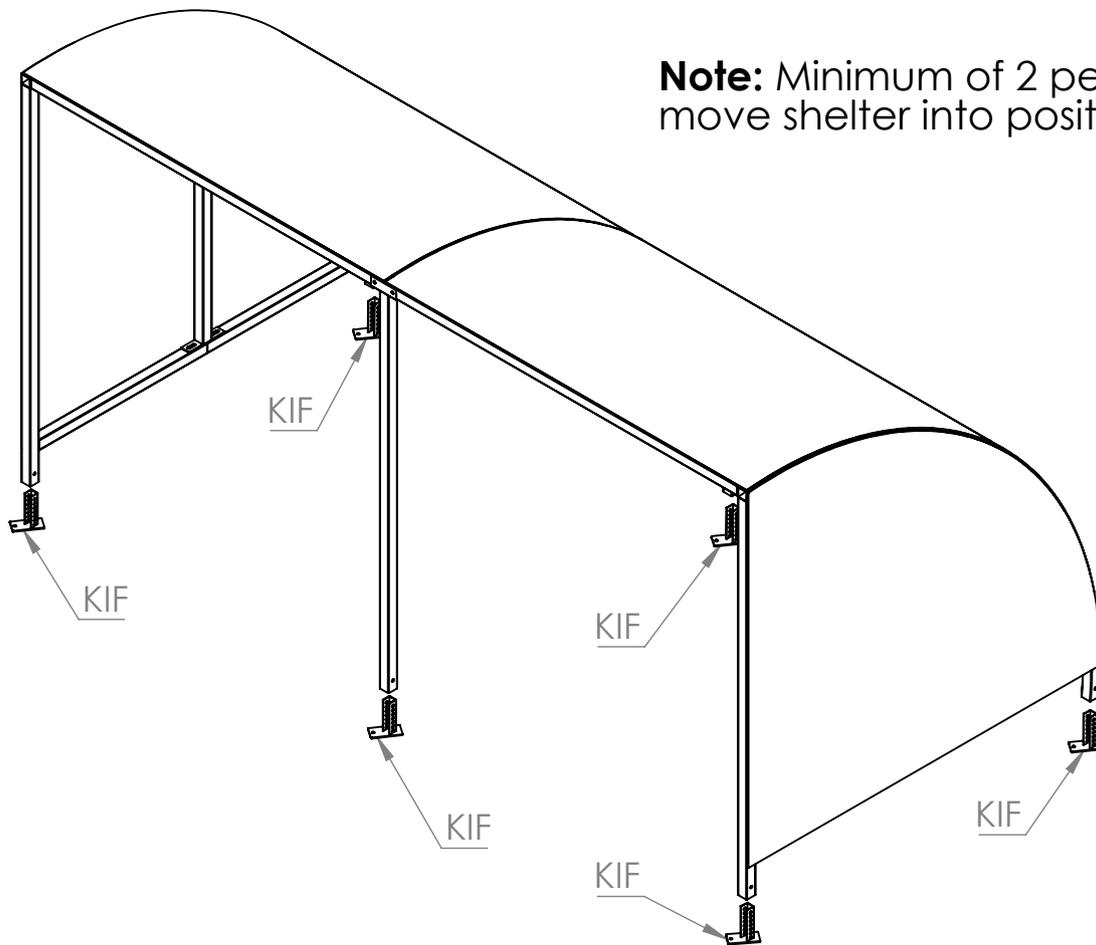

Note: Minimum of 2 people to move shelter into position.

Don't forget to add Plastic End Caps to shelter before finishing.

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.co.uk

Web : www.nobutts.co.uk

Tel : 0800 1777 052

NBB, Unit 5, 145 Sterte Road, Poole, Dorset BH15 2AF

All Parts and Fixings checked by:	
Print Name:	Signature: