

Wall Mounted Rainbow Trio Bongos 1 of 2



Instrument Components:



M10x50 Security Screw

M10x50x3 Square washer

х6



PU 200 Mount




PU 250 Mount

Metric Conversion: 700mm/28" 850mm/33" 1m/39"



Installation Instructions



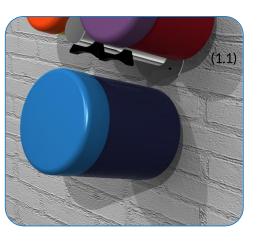

1. Attach bongos to wall mount with the M10x50 security screws, square washers and PU mounts. (1.1) (See Assembly Guide)


2.Position Bongos in desired location, according to correct Key stage height, this may require 2 persons.


3.Mark hole locations (X3) on Using mount plate as a guide, making sure instrument is level. **Use Template supplied**


4. Drill hole locations (X3) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

5. Fix through Plate (X3) with suitable fixings (not supplied) in correct orientation and Key stage

Install Instrument with 1m free space (from widest point) around it.

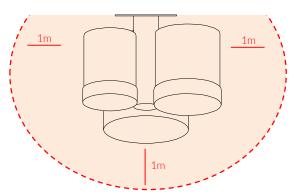

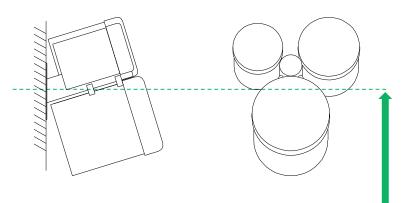



Weight of heaviest part 7 kg (bongos)



Wall Fix Components: 2 Part Cover Cap



Ground Surface

Spares available from percussionplay.com or from your local distributor

7 Kg



Assembly Guide RTBONG



Wall Mounted

Rainbow Trio Bongos 2 of 2



Instrument Components:



M10x50 Security Screw




M10x50x3 Square washer




PU 200 Mount



PU 250 Mount

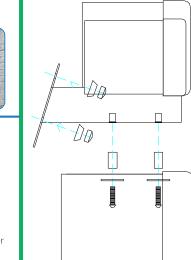

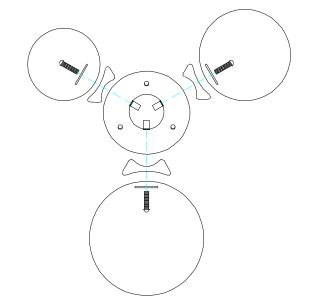

COMPONENTS LIST:

0

 \bigcirc



M10x50x3 square washer X6

HDPE MOUNT 200 X4

HDPE MOUNT 250 X2

2 Part Cover Cap X3





Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M8-M10 Rawl Bolt



Spares available from percussionplay.com or from your local distributor



Wall Fixed Rainbow Trio Chimes



Components:



Eye Straps X2



Pin Torx 25 Driver Bit X1



10x38mm Secure Screw X4


Metric Conversion: 700mm/ 28" 850mm/ 33" 1m/ 39"



Pair Small/Large Beaters X1

Installation Instructions



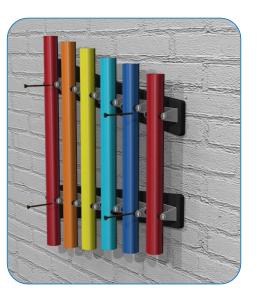


1.Position chimes in desired location, according to correct Key stage height, this may require 2 persons.


2.Mark hole locations (X4) on backboard between 1st and 2nd notes at each end, making sure instrument is level.

3. Drill hole locations (X4) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Backboards (X4) with suitable fixings (not supplied) in correct orientation and Key stage

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference. Install Instrument with 1m free space (from widest point) around it.



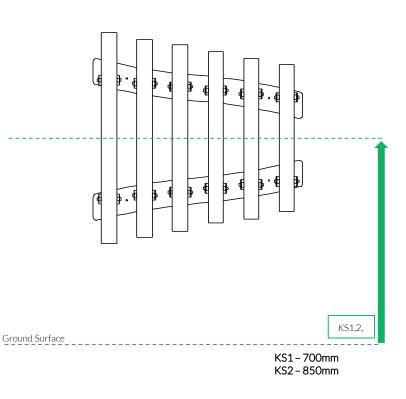

Weight of heaviest part 8 kg (chimes)

Wall fixings are not supplied, installer will select suitable method of fixing.

Spares available from percussionplay.com or from your local distributor

8 Kg



Wall Fixed Rainbow Trio Metallophone Page 1 of 2

Instrument Components:

x4 M8x20 Security Screw

M6x20 Security Screw

2 Part Cover Cap x1

M6 Saddle Strap

Metric Conversion: 700mm/ 28" 850mm/ 33" 1m/ 39"



Installation Instructions







Weight of heaviest part 7kg (Metallophone)



Pair Small Red Beaters X1 Wall Fix Components:



(1.3)

1. Attach the steel mount to the rear of the instrument

with the M8 x20 screws and 2 part security caps. (1.1) (See Assembly Guide)

2. Position instrument in

may require 2 persons.

3.Mark hole locations (X4)

4. Drill hole locations (X4)

according to your chosen

(frame fixings, wall bolts or

of the structure of the wall.

5. Fix through Plate with

in correct orientation and

stage. Cover Fixings with 2

6. Attach the 1 pair of beater to the saddle strap on the leg.

height for intended Key

Part Caps supplied

suitable fixings (not supplied)

chemical anchors) depending

Supplied.

fixings

(Not Supplied)


using the pre drilled holes in square plate. Use Template


desired location, according to

correct Key stage height, this

Wall Anchors not supplied

Install Instrument with 1m free space (from widest point) around it.

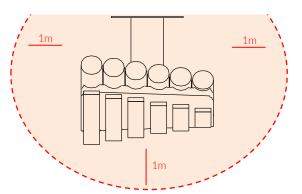

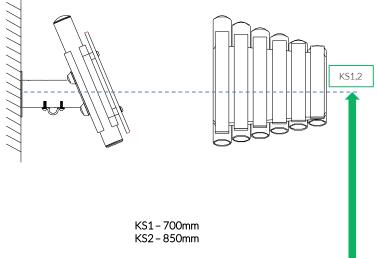

Ground Surface

Spares available from percussionplay.com or from your local distributor



Assembly Guide PPCADE

Thread Lock Solution Required (Not Supplied)



Instrument Components:




M6x20 Security Screw



~ ×1

M6 Saddle Strap





Pair Small Red Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M8-M10 Rawl Bolt





COMPONENTS LIST:



Θ

- 2 Part Cover Cap X8
- M8 Nyloc nut X4
 - Saddle Strap X1
- M6x20 Pin torx X2
- M8x20 Pin torx X4