

# ArborRaft System Installation



1. Excavate tree pit to include 500mm supporting shelf at the top of the tree pit.



2. Backfill lower pit with approved subsoil, position tree or leave vacant for planting season.



3. Compact subsoil to architects specification



4. Add ArborRaft soil to top approx. 400mm of tree pit.




5. Install irrigation system.



6. Cover with ArborRaft TRC30 Membrane.



7. ArborRaft units simply lock together with connectors.

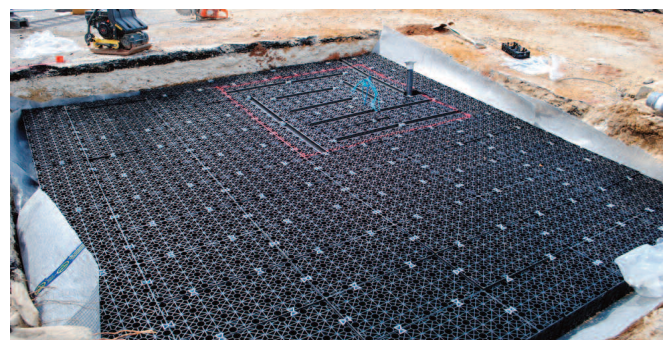

8. The ArborRaft system is complete, finish hard landscape to specification.